

RUGER

RUGER

Redhawk S Blank Firing Starter Pistol
cal. 9 mm R.K.



OPERATION INSTRUCTIONS

8.344.80.06.U.03-08.?.18

RUGER

RUGER

Blank



CAUTION

It should be remembered that even the safest gun is potentially dangerous to you and others when it is not properly handled. Read and understand the operating instructions and learn how the gun works and is to be handled. Always treat any gun as if it were loaded.

A gun can only be safe as long as it is in flawless operating condition. Incorrect handling and lack of maintenance may lead to malfunctions and reduced safety of the gun. Always be aware of possible risks from dropping your revolver or from corrosion or other external influences. In such cases, have your gun inspected by Umarex USA before using it again. Unauthorized modifications to the mechanism, damage caused by the application of force, or modifications performed by third parties will result in the manufacturer not assuming any liability and will void the warranty. Only an Umarex USA gunsmith is qualified to work on this blank firing gun. Contact Umarex USA for repairs.

WARNING:

KEEP YOUR FINGER AWAY FROM THE TRIGGER UNLESS YOU INTEND TO FIRE. ALWAYS KEEP YOUR GUN POINTED IN A SAFE DIRECTION SO THAT YOU AND OTHERS CANNOT BE ENDANGERED.

WARNING:

DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC – IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

CONTENTS

1



Description

2



Operation

3



Safety
instructions

RUGER

⚠ WARNING: FAILURE TO FOLLOW BASIC GUN SAFETY AND THE OPERATING INSTRUCTIONS FOR YOUR REVOLVER MAY CAUSE SERIOUS PERSONAL INJURY OR DEATH. DESIGNED FOR EXPERIENCED SHOOTERS. RECOMMENDED FOR ADULT USE ONLY.

1.1 | THE PARTS OF YOUR NEW GUN

If you learn the names of the parts of your gun, you'll find it easier to understand these instructions. Read the manual carefully to get the most out of your new blank firing pistol.



- | | | | |
|---|------------------|----|-------------------|
| 1 | muzzle | 7 | grip |
| 2 | front sight | 8 | grip panel insert |
| 3 | gas port | 9 | trigger |
| 4 | rear sight | 10 | cylinder |
| 5 | hammer | 11 | ejector |
| 6 | cylinder release | | |

⚠ WARNING: NEVER AIM AT PEOPLE OR PETS, EVEN IF THE PISTOL IS NOT LOADED. DO NOT FIRE THE PISTOL AT POINT-BLANK RANGE AS SEVERE INJURIES CAN BE CAUSED.

2.1 | INSPECTION BEFORE USE

Functional inspection

1. By pressing the cylinder release on the left side of the crane frame, the cylinder can be swung out to the left hand side to make sure the chamber is empty.
2. Press back the cylinder into the frame after checking.

⚠ WARNING: MAKE SURE THAT THE REVOLVER IS UNLOADED (CHAMBER CLEARED OF ANY OBSTRUCTIONS, CYLINDER EMPTY) BEFORE INSPECTION.

2.2 | INSPECTION AFTER USE

⚠ WARNING: MAKE SURE THAT THE REVOLVER IS UNLOADED (CHAMBER MUST BE CLEAR) AFTER EACH USE.

⚠ CAUTION: Always be extremely careful and avoid situations which could lead to an accident.

⚠ WARNING: If you drop the gun, accidental shots might be fired that may cause personal injury or damage. Carefully handle the gun.

⚠ WARNING: Never use anything other than 9 mm R.K. blank cartridges. We recommend Umarex brand cartridges.

⚠ WARNING: This revolver utilizes blank cartridges which conform with SAAMI standards or CIP standards respectively. Please note the chamber is **ONLY** designed to accept blank cartridges. It not designed to accept any fixed ammunition cartridge or live cartridge. Before using this revolver please carefully read the "Operating Instructions" and the "Safety Precautions". Only when you are certain you have fully familiarized yourself with the function of your gun should you practice loading, unloading and firing.

2.3 | LOADING

By pressing the cylinder release on the left side of the frame, the cylinder can be swung out to the left for loading. Press the cylinder into the frame. As soon as the cylinder release is returned and locked into position the revolver is ready to fire.

⚠ WARNING: The revolver is ready to fire. Per safety instructions leave your finger off the trigger and out of the trigger guard until it is pointed in a **SAFE DIRECTION** and you intend to shoot.

⚠ WARNING: Never use cartridges not specifically designated for use in your blank firing gun. **Only use 9 mm R.K. blank firing cartridges** Failure to use the correct type or caliber of cartridge may cause the gun to jam, fail to fire or even generate excessive pressure which can damage or even rupture your gun, causing personal injury, death or property damage.

WARNING: WEAR EYE AND EAR PROTECTORS SPECIFIED FOR FIREARM USE EVERY TIME YOU DISCHARGE YOUR BLANK FIRING GUN. MAKE SURE OTHERS IN THE VICINITY OF WHERE YOU WILL BE SHOOTING DO SO AS WELL. FAILURE TO FOLLOW THIS WARNING WILL CAUSE SERIOUS PERSONAL INJURY.

2.4 | SHOOTING

The pistol can be fired single or double action. "Double action" means that you can fire a shot by only pulling the trigger. "Single action" means that you have to cock the hammer manually. As a matter of principle, avoid pulling the trigger when the cylinder is empty.

WARNING: NEVER AIM AT PEOPLE OR PETS, EVEN IF THE PISTOL IS NOT LOADED. NEVER FIRE THE REVOLVER AT POINT-BLANK RANGE AS SEVERE INJURIES CAN BE CAUSED.

2.5 | UNLOADING

Swing out the cylinder as explained before and eject the empty cases with the ejector. Shooting 9 mm blank cartridges will usually cause considerable fouling. In order to avoid malfunction the revolver should be cleaned thoroughly after each shooting session.

2.6 | FIRING BLANKS

Always hold the pistol in a safe direction and in a way that you and other persons are not endangered (fig. 2). We recommend the use of

personal protective equipment consisting of ear protection and protective shooting glasses. After each shot the cylinder advances and brings a new cartridge into position for firing. This process is repeated until the cylinder has been exhausted. To continue firing, remove the empty cases from the cylinder and insert new ones.

ATTENTION! POWDER GAS MAY ESCAPE FROM THE REVOLVER NEAR THE CHAMBER! WHEN FIRING THE REVOLVER, ALWAYS HOLD THE PISTOL HORIZONTALLY WITH OUTSTRETCHED ARM IN ORDER TO PREVENT THE DISCHARGE OF POWDER AND GAS FROM HITTING THE FACE OF THE SHOOTER.



Fig. 1



Fig. 2

WARNING: ALWAYS KEEP YOUR FINGER AWAY FROM THE AREA BETWEEN THE CYLINDER AND THE BARREL. HOT GAS WILL BE FORCED OUT FROM BETWEEN THE BARREL AND CYLINDER IN ANY REVOLVER DURING NORMAL USE. FAILURE TO FOLLOW THIS WARNING WILL CAUSE SERIOUS PERSONAL INJURY.

WARNING: NEVER FIRE THE PISTOL VERTICALLY! NEVER AIM THE PISTOL AT PETS OR HUMANS! ONLY USE IT IN THE OPEN! MAKE SURE YOUR SHOOTING AREA IS CLEAR AND THAT YOU ARE SUFFICIENTLY FAR AWAY FROM FLAMMABLE OBJECTS! MAKE SURE YOU KNOW AND UNDERSTAND ALL LEGAL PROVISIONS.

CLEANING AND MAINTENANCE

In order to keep the gun functional and to extend its service life, the Ruger Redhawk S should be cleaned and maintained at regular intervals.

WARNING: BEFORE ANY MAINTENANCE, SWING OUT THE CYLINDER, AND INSPECT THE CYLINDER TO MAKE SURE IT IS EMPTY AND FREE OF ANY OBSTRUCTION.

After every use, we strongly recommend to clean and lubricate the revolver, and keep it in a safe, secure and dry place. To clean the gun, brush the chamber with the enclosed brush. Then dry and oil it. It is advisable to lubricate with oil, before using the revolver after an extended period of time of inactivity.

STORAGE

Keep this revolver and ammunition away from children and unauthorized persons. Guns should be stored separately from ammunition. Check to make sure gun is unloaded when removing from storage or getting from another person.

WARNING: NEVER STORE A LOADED REVOLVER AND NEVER LEAVE A LOADED REVOLVER UNATTENDED!

WARNING: ALWAYS INSPECT YOUR REVOLVER VISUALLY TO BE SURE THE HAMMER AND TRIGGER ARE IN THE AT REST OR FORWARD POSITION BEFORE CARRYING OR STORING IT. NEVER HOLSTER, CARRY OR STORE YOUR REVOLVER WITH THE HAMMER COCKED. REMEMBER TO KEEP YOUR GUN POINTED IN A SAFE DIRECTION. NEVER LEAVE A LOADED GUN UNATTENDED.

REPAIR OF UMAREX-REVOLVERS

WARNING: A GUN WHICH FAILS TO FUNCTION PROPERLY IS DANGEROUS. IT SHOULD BE SAFELY STORED IN A WAY THAT PREVENTS ITS USE BEFORE IT IS REPAIRED. IT IS DIFFICULT TO REPAIR A GUN, AND IMPROPER ASSEMBLY CAN LEAD TO DANGEROUS MALFUNCTIONS OR SERIOUS INJURY. CONTACT UMAREX USA SERVICE DEPARTMENT FOR REPAIRS. PHONE: 479-646-4210.

SPECIFICATIONS

| | | |
|-------------------|-----------|-------------|
| Caliber: | 9 mm R.K. | |
| Length: | 230 mm | (9.0 in.) |
| Height: | 130 mm | (5.125 in.) |
| Width: | 36 mm | (1.4 in.) |
| Length of barrel: | 104.5 mm | (4.1 in.) |
| Weight: | 760 g | (1.68 lbs.) |
| Capacity: | 6 | |

3.1 | WARRANTY

This product is warranted to the retail consumer for one (1) year from date of purchase against defects in material and workmanship and is not transferable.

WHAT IS COVERED - Replacement parts and labor.

WHAT IS NOT COVERED - Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY CLAIMS - Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479)-646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA. Your name, address, phone number and a note explaining the defect found must be included in the package. A copy of the original purchase receipt must accompany the return. Include a check made to Umarex USA in the amount of \$14.95 to cover shipping and handling. **NEVER SHIP A LOADED GUN. NEVER SHIP A GUN WITH AMMO.**

IMPLIED WARRANTIES - Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one (1) year from date of retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

To validate this warranty - Send in the registration card within 30 days to: Umarex USA, 6007 South 29th Street, Fort Smith, Arkansas 72908 or Register online at www.UmarexUSA.com.

⚠ WARNING: THE COMPONENTS OF YOUR BLANK FIRING GUN WERE ENGINEERED AND MANUFACTURED TO DELIVER OPTIMUM PERFORMANCE. ANY MODIFICATION OR TAMPERING WITH YOUR GUN MAY CAUSE A MALFUNCTION, WILL VOID YOUR WARRANTY, AND MAY MAKE IT UNSAFE TO USE. ANY CHANGE IN PERFORMANCE (SUCH AS A LOWERED TRIGGER PULL FORCE AND SHORTENED TRIGGER TRAVEL), INDICATES POSSIBLE MODIFICATION, TAMPERING, AND/OR WEAR. SUCH GUN SHOULD BE INSPECTED, REPLACED, OR PROPERLY REPAIRED BY ONLY QUALIFIED UMAREX USA PERSONNEL. ANY GUN THAT HAS BEEN DROPPED SHOULD BE CHECKED BY QUALIFIED PERSONNEL TO ENSURE THAT ITS FUNCTION HAS NOT BEEN AFFECTED.

3.2 | SAFETY INSTRUCTIONS

- Safe gun handling is YOUR personal responsibility at all times. Safety must be the prime consideration of anyone who owns or handles any gun.
- Weapons without a safety should always be carried with the chamber clear and magazine removed, or cylinder unloaded.
- Before putting down the revolver always make sure that it is not loaded. Open the cylinder and verify that no cartridges are in the chamber.
- Guns and ammunition are to be stored separately from each other in order to keep them away from unauthorized persons or children.
- Always check to make certain a gun is unloaded when getting from storage or another person.
- Always bear in mind that even the safest gun may be dangerous for you and others if improperly handled.
- Never place your finger inside the trigger guard unless you intend to fire.
- Always hold your gun in a way that neither you or other persons are endangered, because at distances of less than 5 ft even a blank firing gun can cause serious injuries or even death.
- Keep the revolver and ammunition away from heat sources and flames.
- Use only blank cartridges.
- The gun must only be fired horizontally into the air, with the arm stretched out.
- Always wear ear protection and protective shooting glasses when shooting.
- In the event of a misfire, open cylinder and remove the cartridges in the chamber by pressing the ejector rod. Do not reuse a cartridge involved in a misfire. Dispose of properly.
- Prior to transporting blank firing guns, please keep yourself informed about the legal regulations in your state and local areas.
- Umarex and Umarex USA decline any and all responsibilities for improper use of this blank revolver. For details, refer to the appropriate legal instructions.
- In case of tampering with the revolver, Umarex and Umarex USA decline any Civil and Penal responsibilities and will not indemnify any damage.
- The user is liable for any damage caused to oneself and to third persons.



Distributed by:

UMAREXUSA[®]

Umarex USA Inc.

6007 South 29th Street - Fort Smith, AR 72908 USA

Phone: (479) 646-4210 - Fax: (479) 646-4206

www.umarexusa.com